


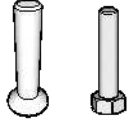


Thank you for purchasing our quality van Racking. Fitting is generally relatively simple, however the main consideration is to ensure that the fixings are secured to a robust structure, preferably the metal structure of the van or alternative a rigid van lining. The suitability is the responsibility of the van owner. The Racking should be fully assembled in the order below before lifting into and securing to the vehicle.

1  If a Single rack these will be M6 x 30 Hex Bolts  
If adjoined to another rack, use M6 bt 30  
Countersunk, 4 Fixings per shelf

2  M6 Nut and washer, 4 per shelf

3  4 x 3.5 x 25 wood screws

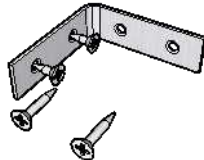4  **FIXING BRACKETS**  
Use 4 x self tapping screws per bracket, 2 x 4 x 12  
and 2 x 4 x 19. Short screws to racking, long screws  
to vehicle. Position top, middle and bottom. Ideally  
they should coincide with a section of your van that  
is load bearing and rigid. It is the responsibility of  
the installer to make sure this is the case.

Job No: PTBR500

Generic instruction for a Modular  
Toolbox Rack